
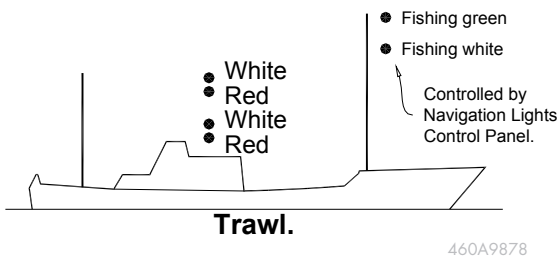


# TEF 4614 CONTROL PANEL FOR TRAWLER- AND PURSE SEINER SIGNAL

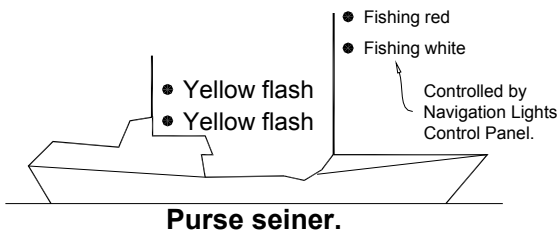

## Rules at sea; Rule 26, enclosure II (shortened)

Additional signals for fishing vessels fishing close to other fishing vessels

Vessels trawling must have 2 white and 2 red lanterns mounted alternately directly one over another. These lanterns must indicate when the trawl is shooting, hauling and when the trawl is caught in an obstacle.

Vessels fishing with purse seiner, must show 2 lanterns with yellow light. One mounted directly over the other. these lanterns must flash alternately every second and with equally long light- and dark periods.

## APPLICATION

- For control and protection of trawler- and purse seiner lights
- For flush mounting

## FEATURES AND BENEFITS

- Easy installation
- Solid State flash circuits
- Control unit separated from power unit. Length of control cable is optional. Standard length is 2 meters
- Layout adapted to Tranberg's lantern control panels
- Dimmable indicator lights


## TECHNICAL DATA

|                              |  |
|------------------------------|--|
| <b>Material:</b>             | Blach anodised aluminium<br>Engraved text                      |
| <b>Supply voltage:</b>       | See flip side  |
| <b>Max load:</b>             | See flip side  |
| <b>Fuse:</b>                 | Not included. See flip side                                    |
| <b>Enclosure:</b>            | IP20   |
| <b>Dimensions (WxHxD):</b>   | Control unit: 144 x 96 x 40 mm<br>Main unit: 230 x 80 x 130 mm |
| <b>Cut out control unit:</b> | 120 x 76 mm  |
| <b>Weight:</b>               | 1,5 kg.  |

## APPROVALS AND CERTIFICATES

NA

# TEF 4614 CONTROL PANEL FOR TRAWLER- AND PURSE SEINER SIGNAL

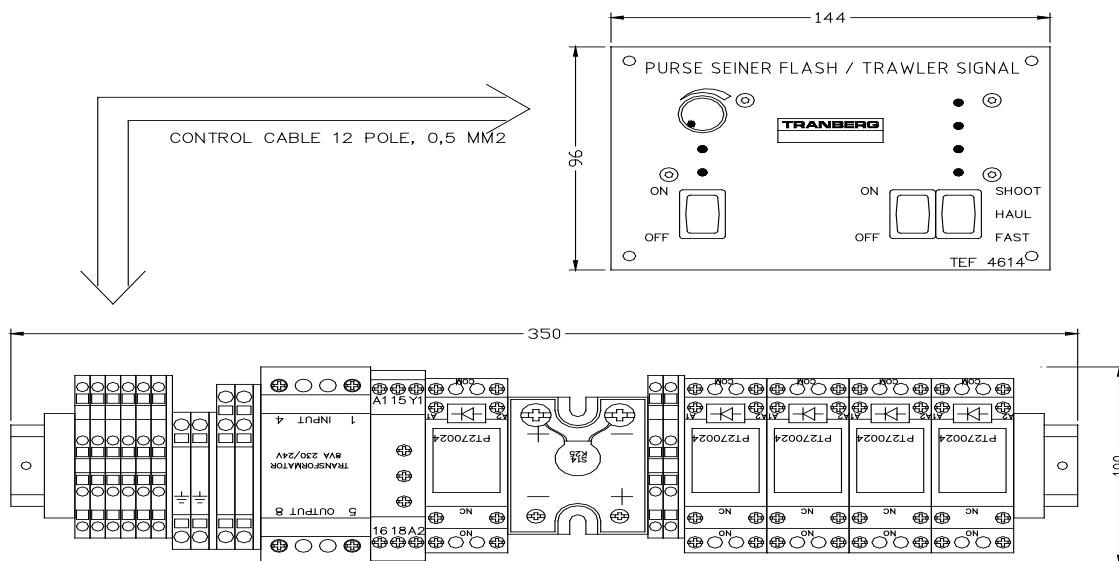

## DESCRIPTION

|                                 | Supply voltage | Max load | Max fuse size | Part No. |
|---------------------------------|----------------|----------|---------------|----------|
| Trawler signal and purse seiner | 24V DC         | 6 x 80W  | 10A (Type B)  | 4614 100 |
| Trawler signal and purse seiner | 24V AC         | 6 x 80W  | 10A (Type B)  | 4614 150 |
| Trawler signal and purse seiner | 115V AC        | 6 x 200W | 10A (Type B)  | 4614 200 |
| Trawler signal and purse seiner | 230V AC        | 6 x 200W | 10A (Type B)  | 4614 300 |

## DESCRIPTION

|                     | Supply voltage | Max load | Max fuse size | Part No. |
|---------------------|----------------|----------|---------------|----------|
| Trawler signal only | 24V DC/AC      | 4 x 80W  | 10A (Type B)  | 4614 101 |
| Trawler signal only | 115V AC        | 4 x 200W | 10A (Type B)  | 4614 201 |
| Trawler signal only | 230V AC        | 4 x 200W | 10A (Type B)  | 4614 301 |

## DESCRIPTION

|                         | Supply voltage | Max load | Max fuse size | Part No. |
|-------------------------|----------------|----------|---------------|----------|
| Purse seiner flash only | 24V DC         | 2 x 80W  | 10A (Type B)  | 4614 102 |
| Purse seiner flash only | 24V AC         | 2 x 80W  | 10A (Type B)  | 4614 152 |
| Purse seiner flash only | 115V AC        | 2 x 200W | 10A (Type B)  | 4614 202 |
| Purse seiner flash only | 230V AC        | 2 x 200W | 10A (Type B)  | 4614 302 |

## OPTIONS

- Two set of output terminals
- Front plate with measures 192 x 96 mm. For adapting to Tranberg's lantern control panel with 192 mm width
- Optional length of control cable